



How to connect to pin pads in a RDP environment

On the terminal:


1. Install Ingenico Driver and force the COM port to be COM91
2. Install VSPE (Download SetupVSPE.exe)
3. Run "VSPE" from "Start Menu"; click the appropriate button if prompted:
 - a. Click "Cancel" when prompted "Do you want to order license now?"

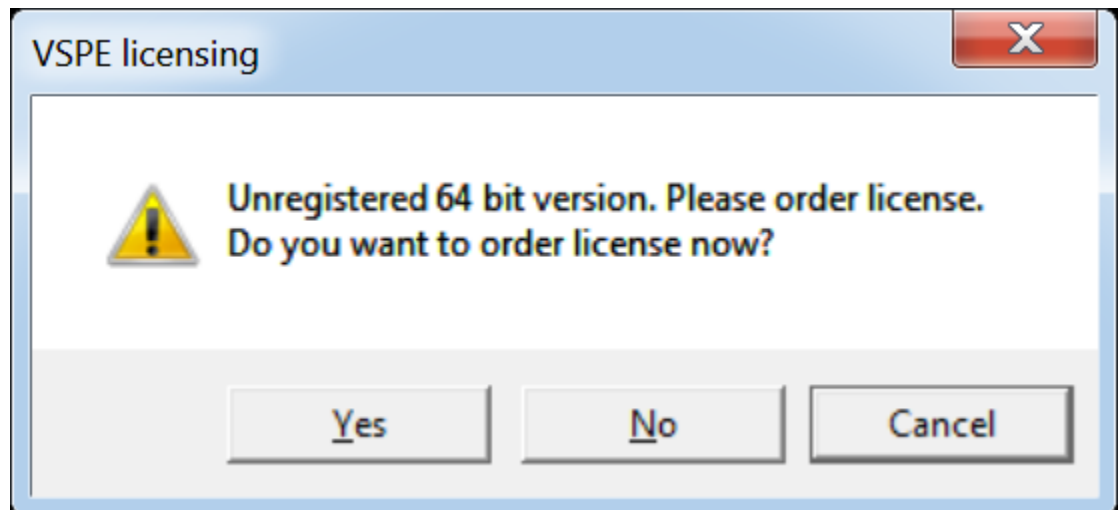


- b. Click "OK" when prompted "PLEASE ORDER 64 BIT LICENSE..."

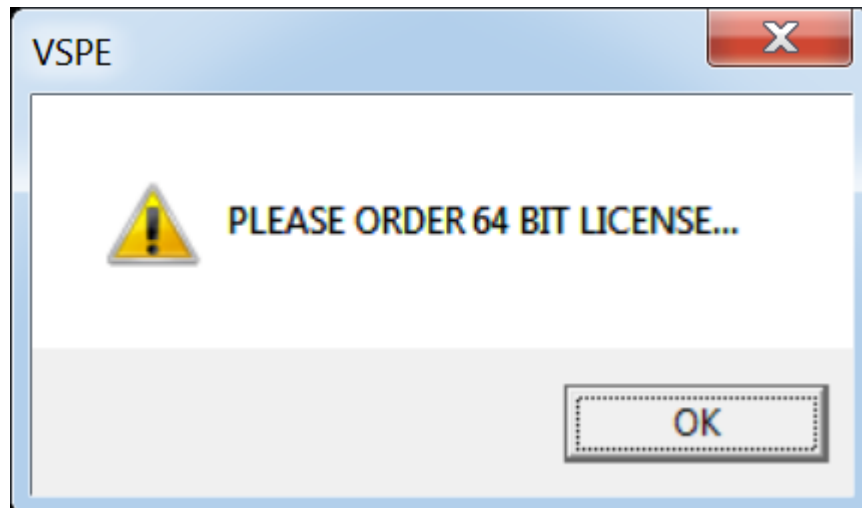


4. Click on "Devices" → "Create..."
5. Select "TcpServer" under "Device type", then click "Next >"

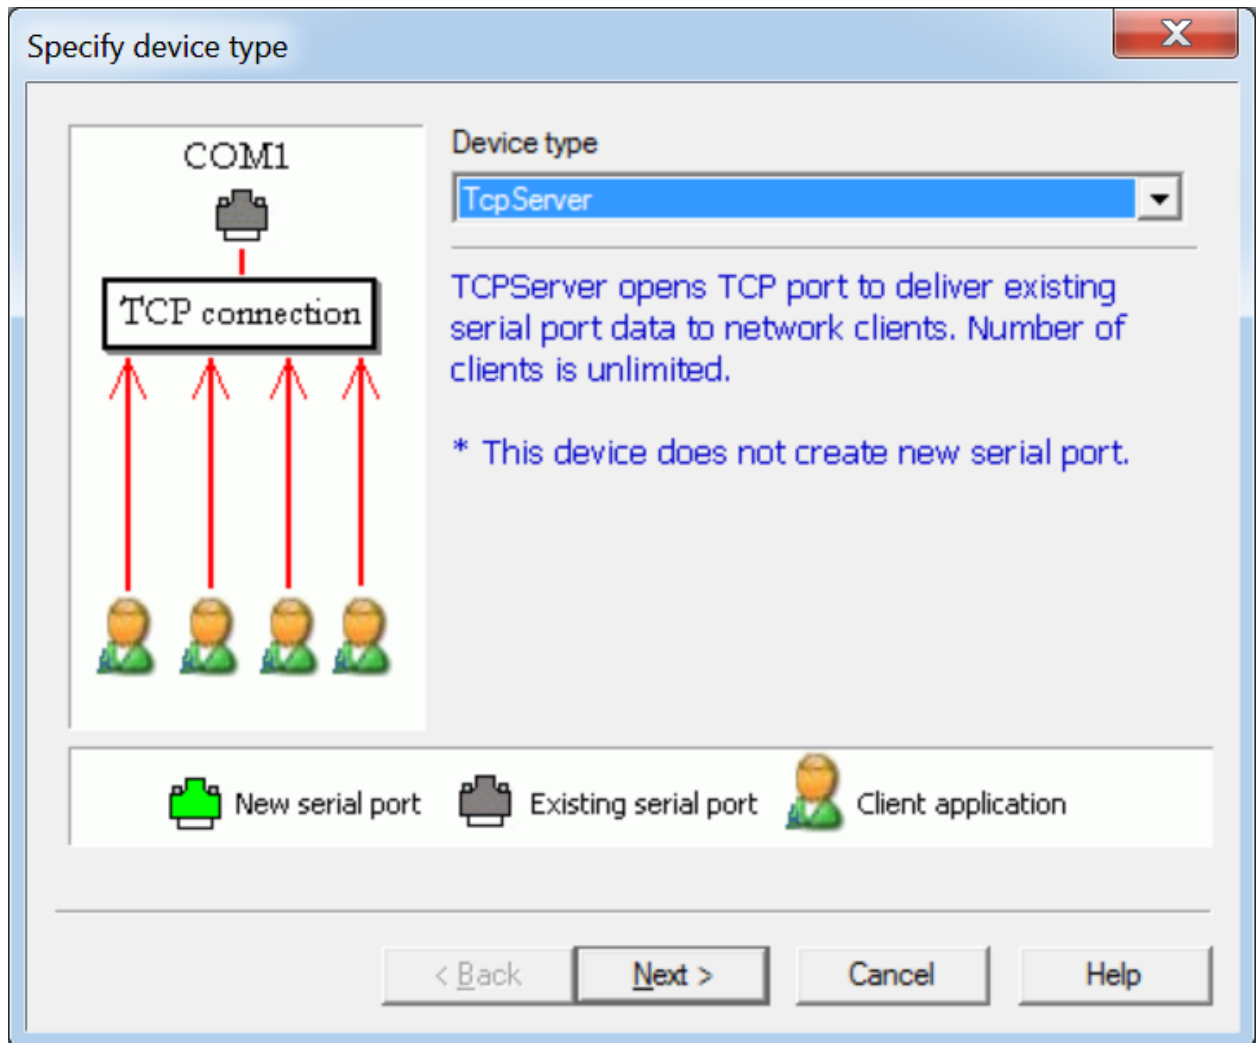

6. Select port "COM91" under "Source serial port", then click "Finish"

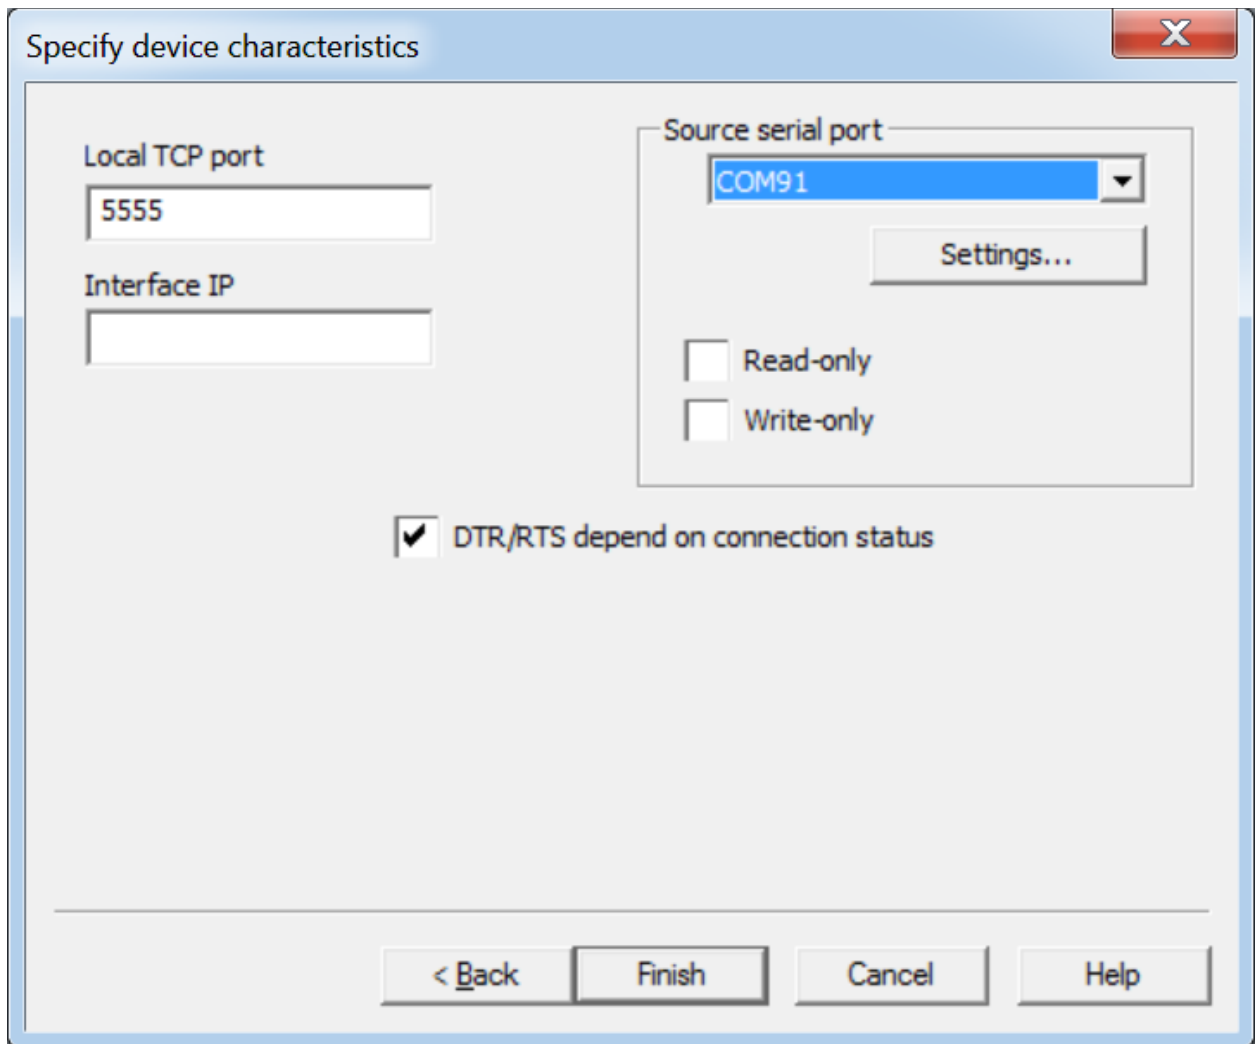


7. VSPE shows the added emulation:

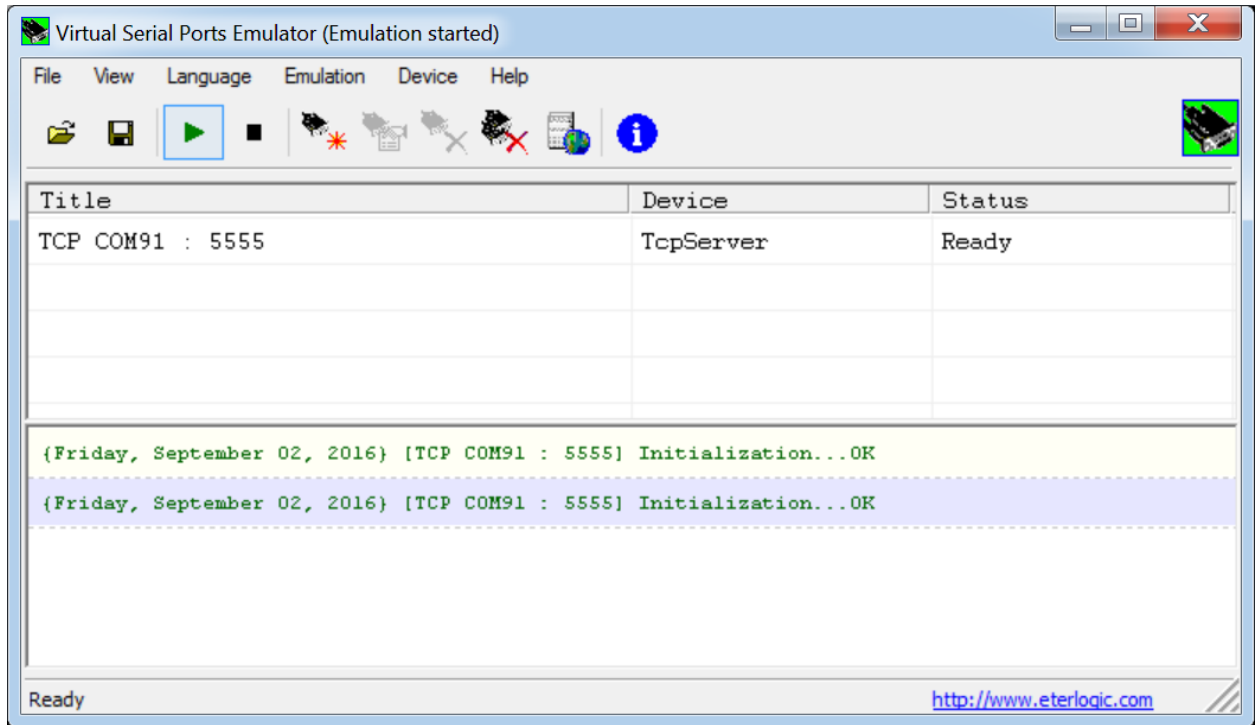

8. Click "Save configuration..." and name the file "C:\911\terminal.vspe"


9. Modify the properties of the shortcut "VSPE" on desktop, and add "C:\911\terminal.vspe" after "VSPEmulator.exe" under "Target"

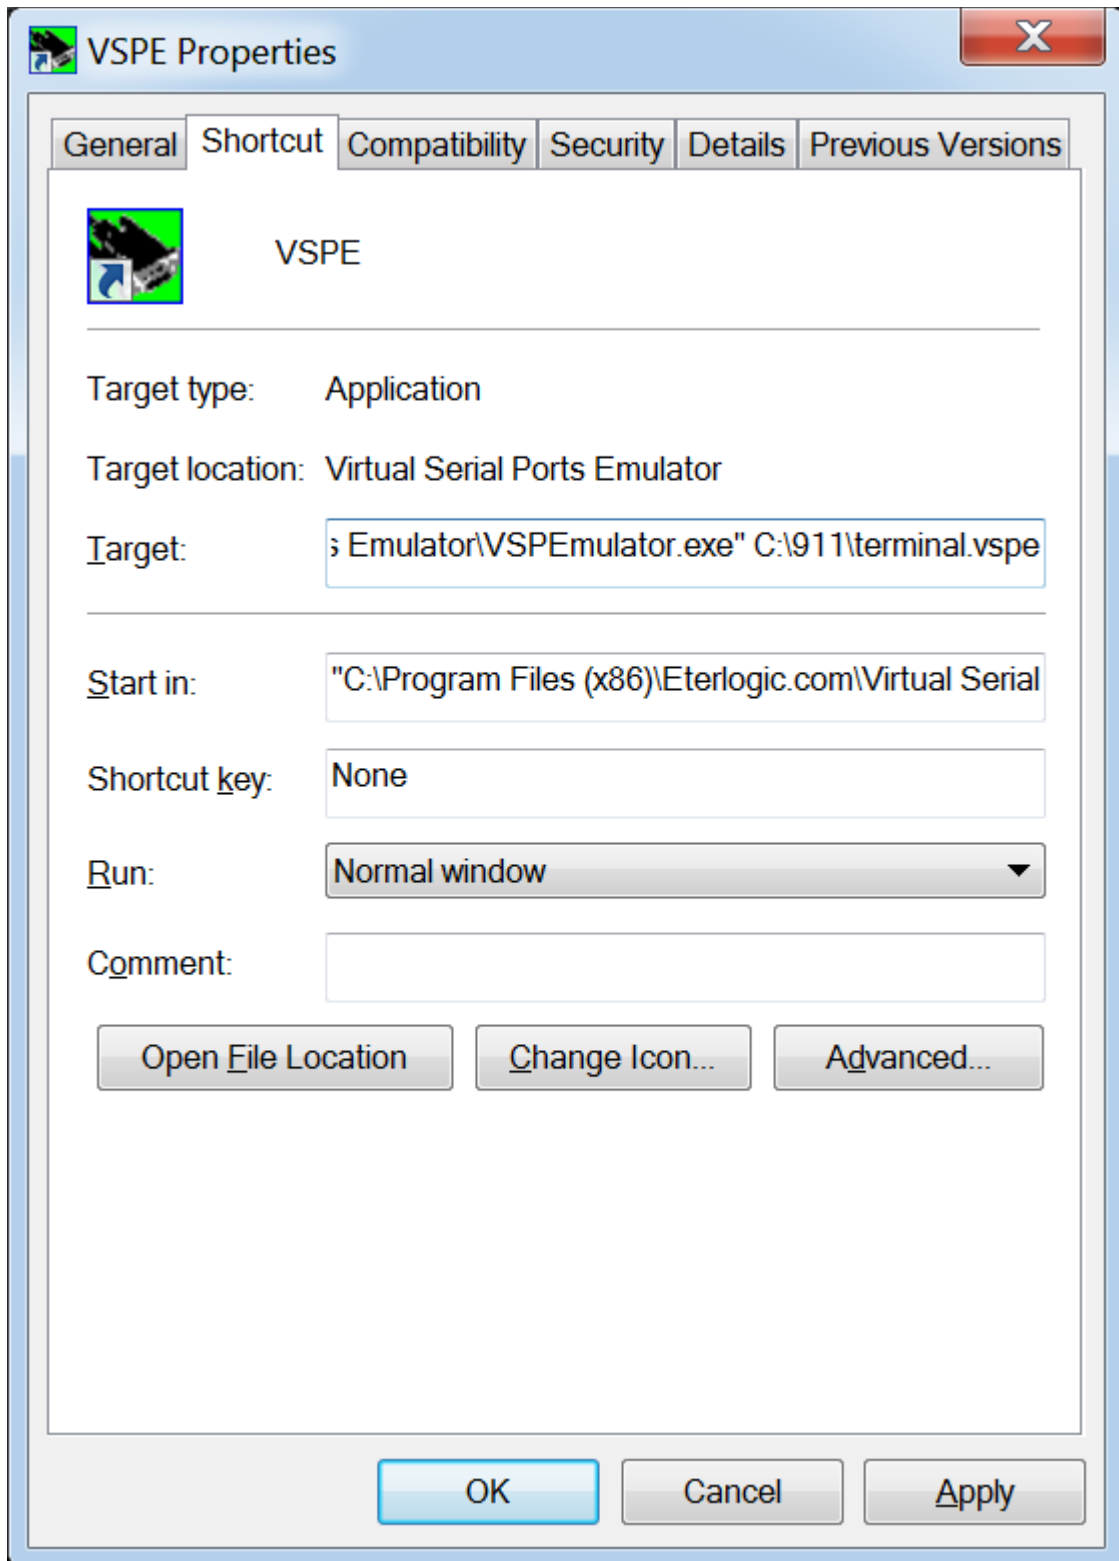


On the server:

1. Install VSPE (Download SetupVSPE.exe)


2. Run "VSPE" from "Start Menu"; click the appropriate button if prompted:
 - a. Click "Cancel" when prompted "Do you want to order license now?"

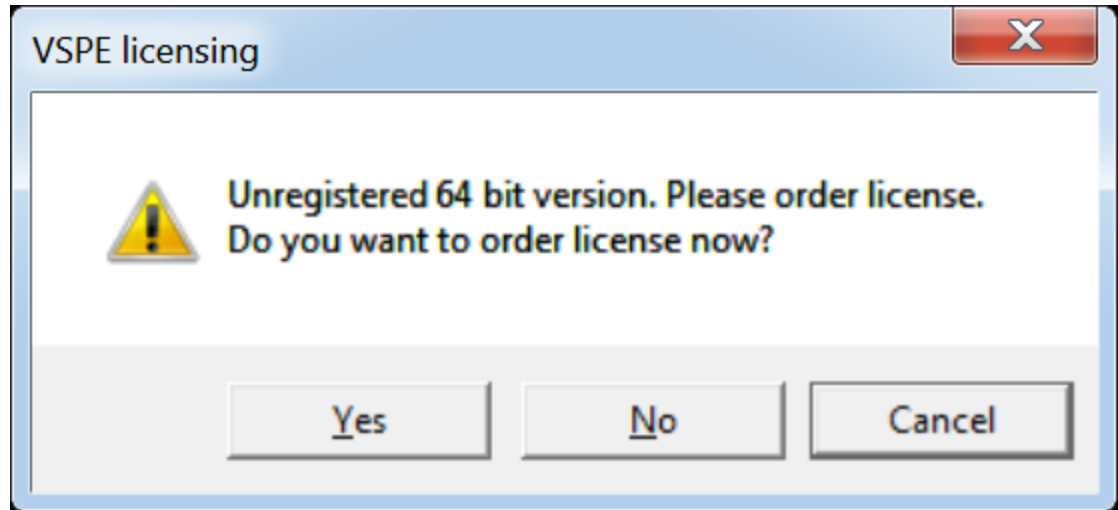

- b. Click "OK" when prompted "PLEASE ORDER 64 BIT LICENSE..."

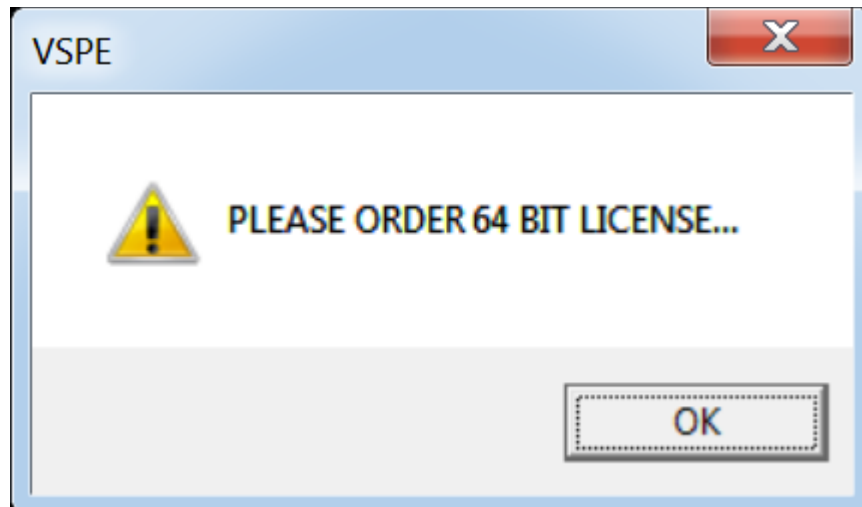

3. To create the link to terminal 1, click on “Devices” → “Create...”
4. Select “Pair” under “Device type”, then click “Next >”

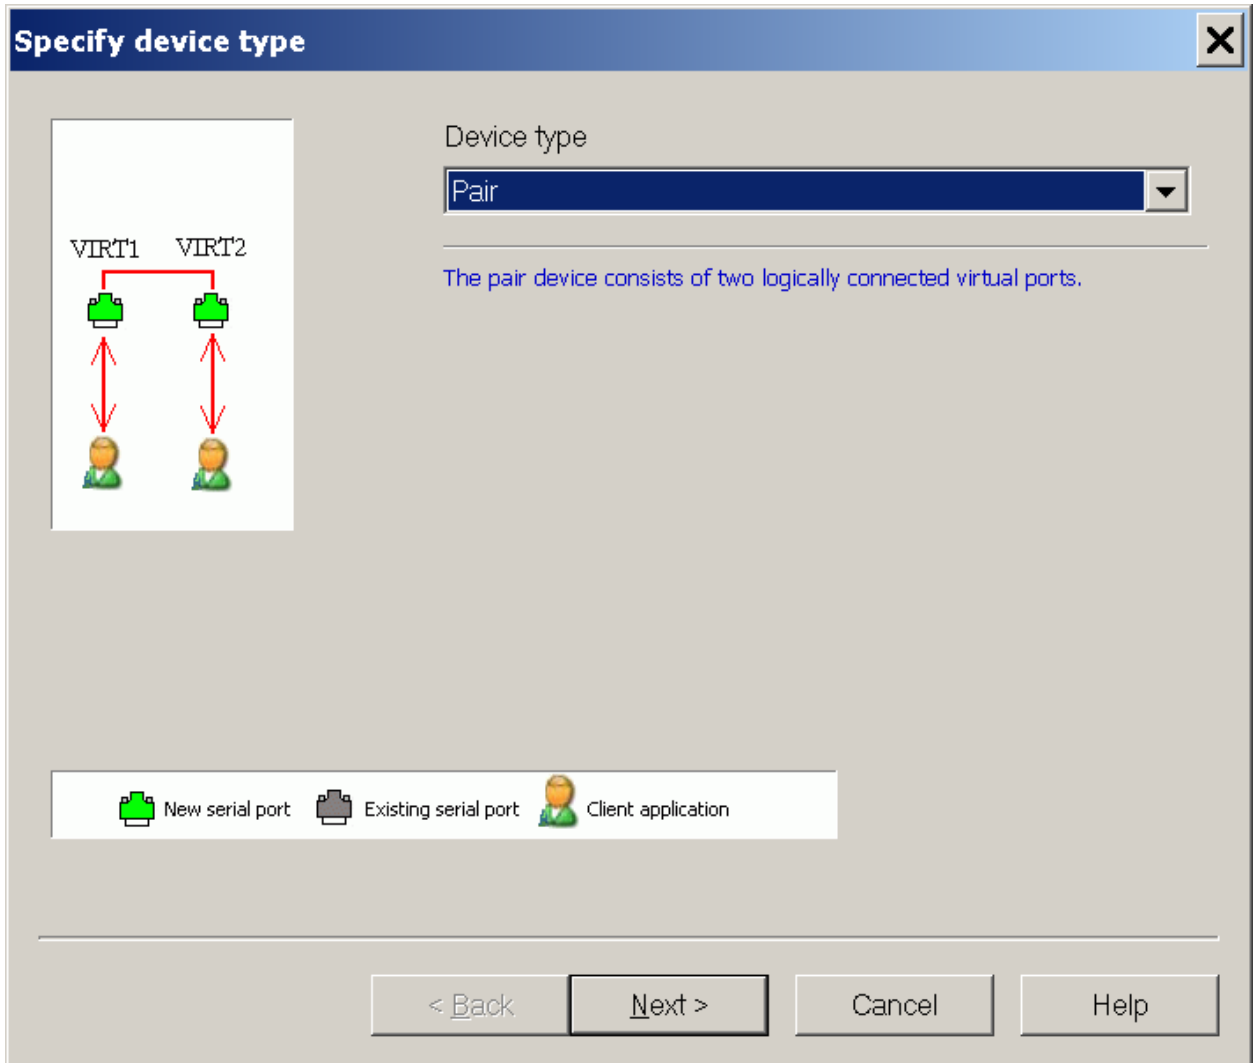

5. Select "COM101" under "Virtual serial port 1" and "COM201" under "Virtual serial port 2", check "Emulate baud rate (optional)", then click "Finish"

Specify device characteristics [X]


Virtual serial port 1: COM101

Virtual serial port 2: COM201


Emulate baud rate (optional)

< Back Finish Cancel Help

6. Click on “Devices” → “Create...”
7. Select “TcpClient” under “Device type”, then click “Next >”

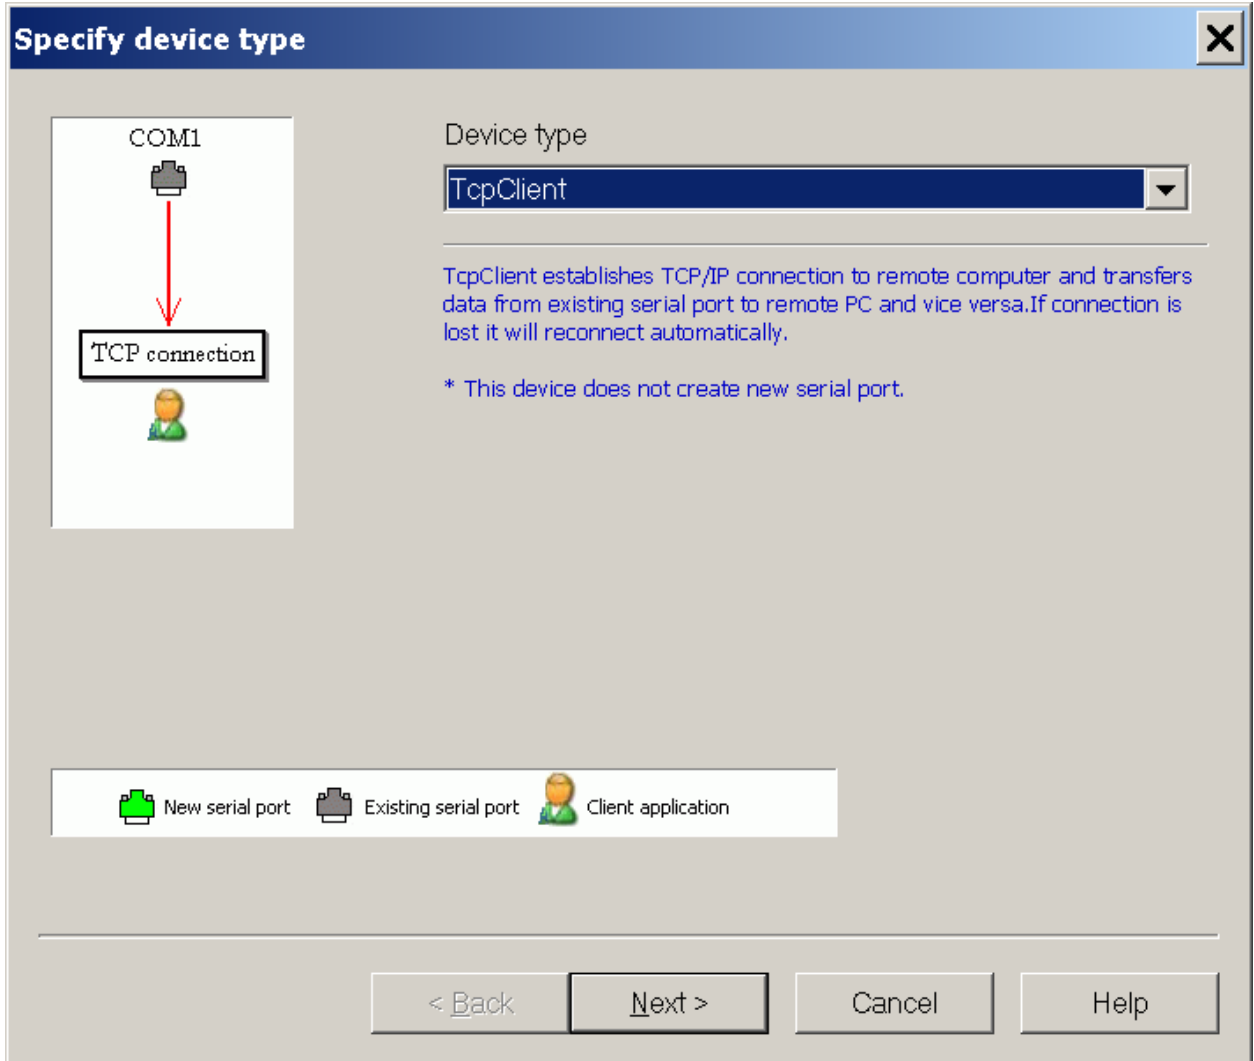

8. Enter the IP address of the terminal under “Remote TCP host”, select “COM201” under “Source serial port”, then click “Finish”

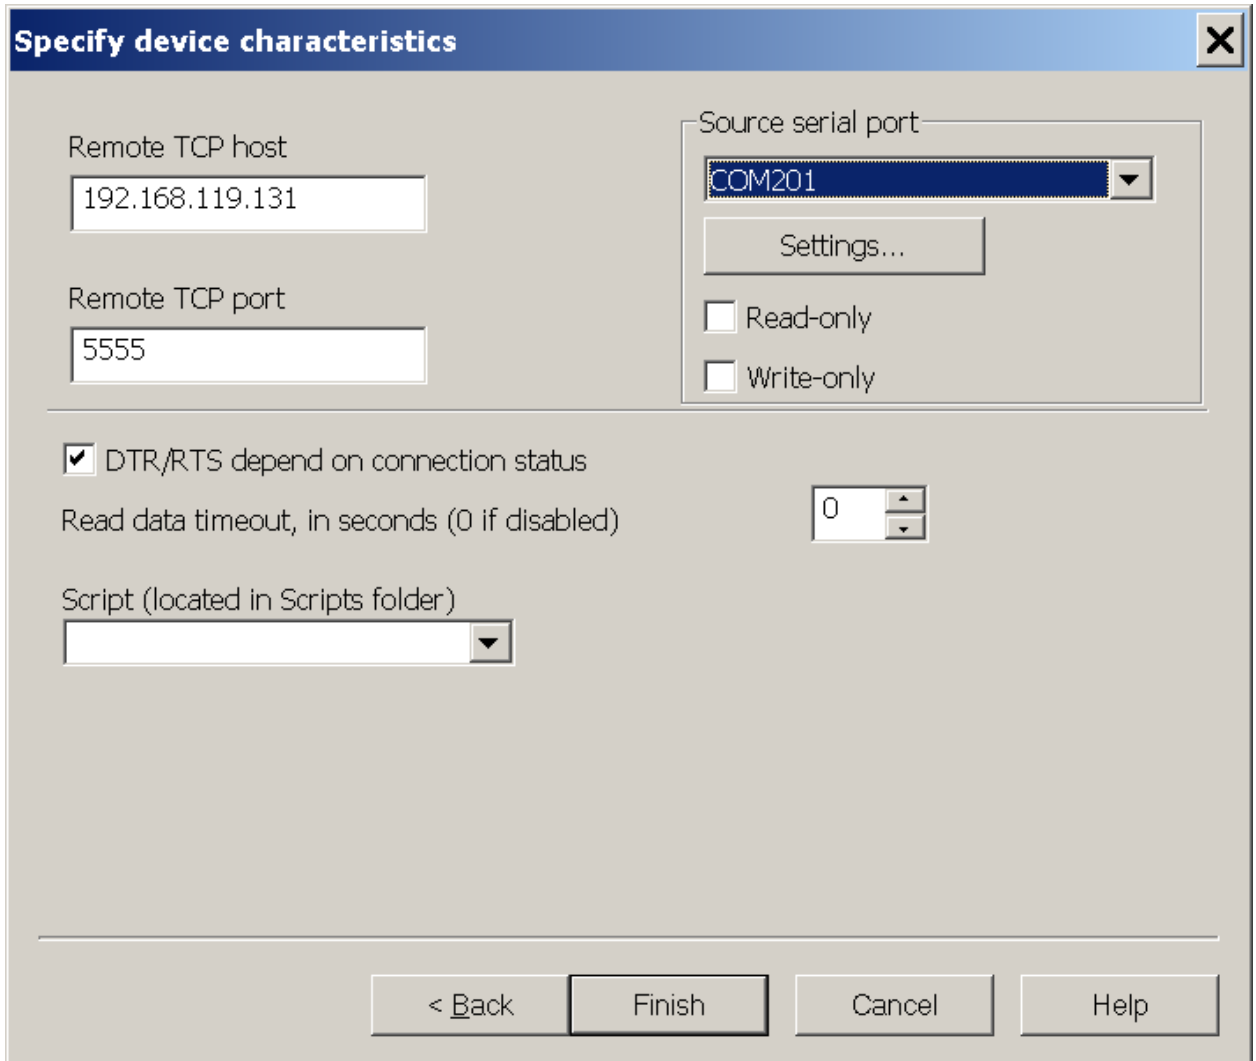


The image shows a dialog box titled "Specify device characteristics" with a close button (X) in the top right corner. The dialog is divided into several sections:

- Remote TCP host:** A text input field containing "192.168.119.131".
- Remote TCP port:** A text input field containing "5555".
- Source serial port:** A dropdown menu with "COM201" selected. Below it is a "Settings..." button.
- Read-only and Write-only:** Two checkboxes, both of which are unchecked.
- DTR/RTS depend on connection status:** A checked checkbox.
- Read data timeout, in seconds (0 if disabled):** A spinner control set to "0".
- Script (located in Scripts folder):** An empty dropdown menu.


At the bottom of the dialog, there are four buttons: "< Back", "Finish", "Cancel", and "Help".

9. VSPE shows the added emulations:

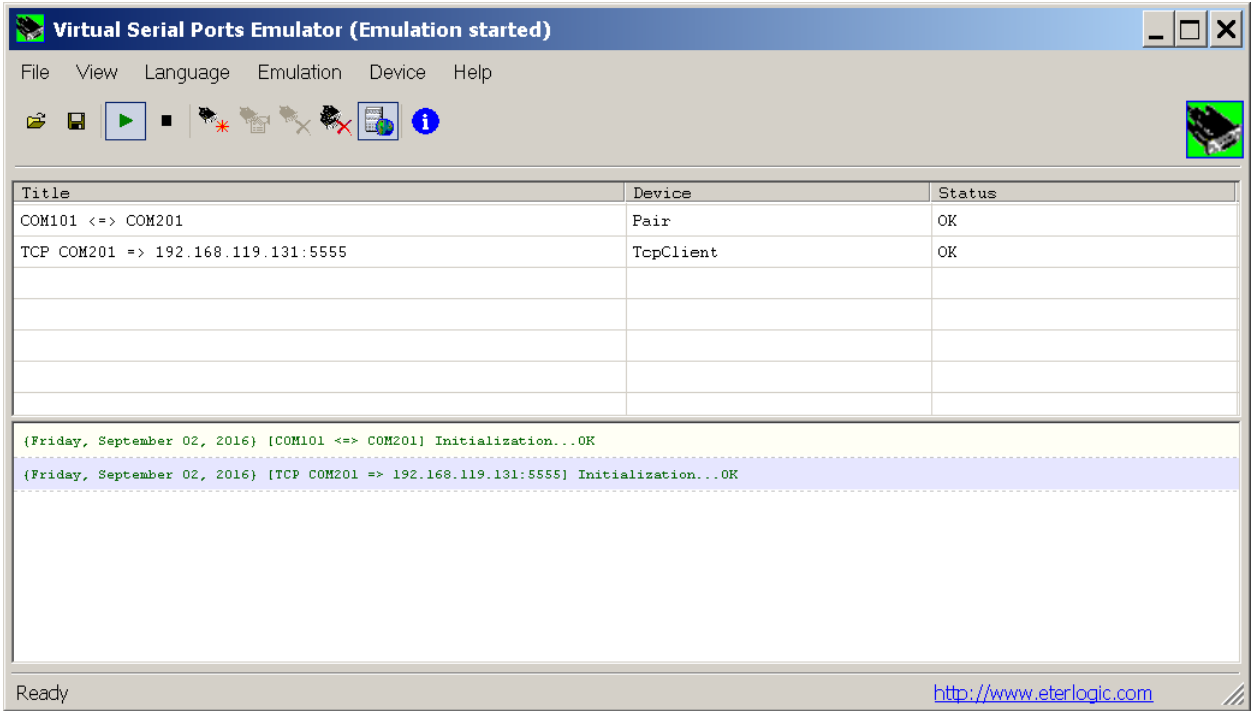

10. Click "Save configuration..." and name the file "C:\911\server.vspe"

11. Modify the properties of the shortcut "VSPE" on desktop, and add "C:\911\server.vspe" after "VSPEmulator.exe" under "Target"

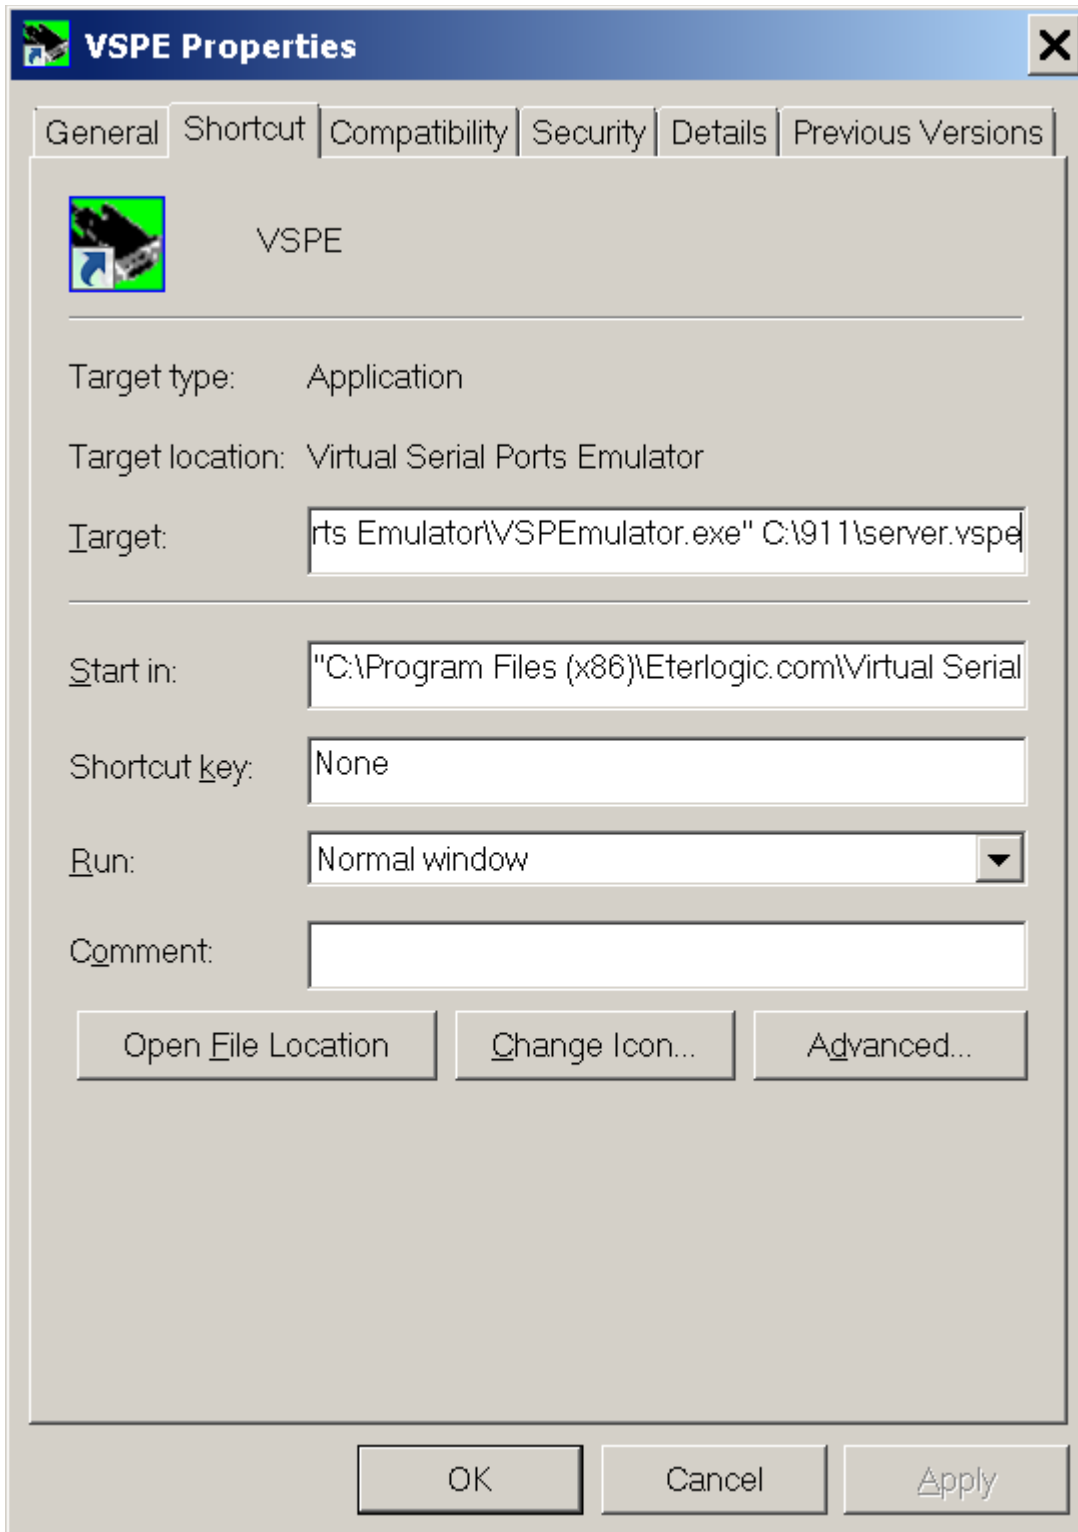

12. Repeat steps 3 to 8 for terminal 2 and use "COM102" and "COM202" in place of "COM101" and "COM201" as well as the correct IP address for terminal 2.
13. Repeat steps again for the rest of terminals, change "COM101", "COM201", IP address accordingly.

In CLCAPI.INI

1. Change port setting for terminal 1 to "PortDef=COM101:9600,n,8,1"
2. Change port setting for terminal 2 to "PortDef=COM102:9600,n,8,1"
3. Change port setting for the rest of the terminals with the correct COM number